



FOR ACCURATE NEUTRAL REFERENCE

Instructions

Photography Use

1. Place DigiGrey™ in the scene with the subject to be photographed.
2. DigiGrey™ must be evenly lit by the same light source as the subject.
3. Angle card toward camera.
4. Set camera to custom or manual white balance.
5. Zoom in or fill camera view entirely with DigiGrey™ card.
6. Use camera manufacturer's white/grey balance procedure as recommended to adjust the neutral point.
7. Remove DigiGrey™ and photograph the scene.
8. Set a new custom/manual or white/grey balance with DigiGrey™ if you change your camera lens, location, camera position or lighting.

Computer Software Use

For users processing images in Adobe Camera RAW using Photoshop CS and up, we recommend the following white balance procedure:

1. Open RAW images in Adobe Camera RAW.
2. Choose a reference image containing DigiGrey™.
3. Select images from the same location, project or lighting condition that don't contain the reference. (Hold the SHIFT key, then click on additional images to select a group from the sidebar).
4. Select the "White Balance Tool" from the side or top menu bar.
5. Click on DigiGrey™ with the tool to set the white balance for the selected images.
6. Repeat the above steps for each group of images using its DigiGrey™ reference.

www.DigiGreyShop.com
508.872.4880